



INSTALLATION AND OWNER'S MANUAL

Titanium Silencer Kit Z4030 for use with K1200 S Model

Please read these instructions carefully and thoroughly before beginning work.

Before installing accessory, carefully consider whether one possesses the necessary technical skills and workshop tools to complete the installation properly. Otherwise, any Motorcycle Retailer will be glad to install this accessory.

Dealers, if installing the Exhaust for a customer please give him this manual. It contains the instructional and reference material needed to properly maintain and use this product.

At time of purchase report any missing parts directly to ZTechnik. The following information is necessary: BAG NUMBER on outside of plastic fastener bag and DATE STAMP located on the end panel of the outer box.

Thank you.

The following symbols are used in these instructions:




Special notes and cautionary measures.



Tips for facilitation of operation, control and adjustment, as well as maintenance work.

PARTS LIST

Index	Description	Qty.
1	Silencer	1
2	Joint	1
Parts Bag		
3	Nut, M8,	1
4	Screw, M8 x 45	1
5	Washer	2
6	Hanger Bracket, Aluminum	1
7	Hanger Rubber	1
8	Retainer Spring	1
9	Cover, Retainer Spring	1
10	Warranty Card	1
11	Sealant Packet (Not Pictured)	1



T45 and T25 Torx
Spring Puller
Hex Key Wrench, 6mm
13mm Wrench





Warranty Card, item 15 must be completed and mailed back to National Cycle, Inc.



Right and Left side of Motorcycle is determined while sitting on the bike.

PREPARATION:

1. Position the motorcycle securely on its center (main) stand.
3. Remove the heat shield cover. **(T25 Torx Wrench)** **Figure 1.**
4. Loosen the muffler hanger. **(T45 Torx Wrench)** **Figure 2.**
5. Loosen the muffler clamp. Make very loose. Retain muffler clamp. **(T45 Torx Wrench)** **Figure 3.**
6. Remove muffler with stock joint. **Figure 4.**

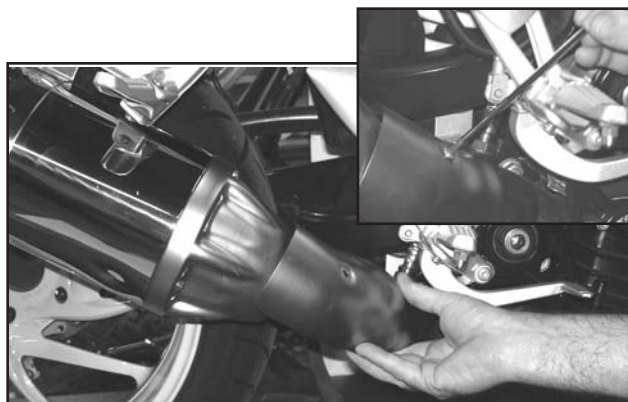


Figure 1



Figure 2




Figure 3



Figure 4

7. Install Silencer Joint supplied in the Parts Kit..

 Leave all hardware loose until step 18.

7. Install Rubber Cover over Spring. **Figure 5.**

13. Assemble Rubber Strip to Hanger Strap. **Figure 6.**

14. Use Sealant supplied in parts bag and apply some to outside of Silencer.

Install Silencer. **Figure 7.**



Figure 5

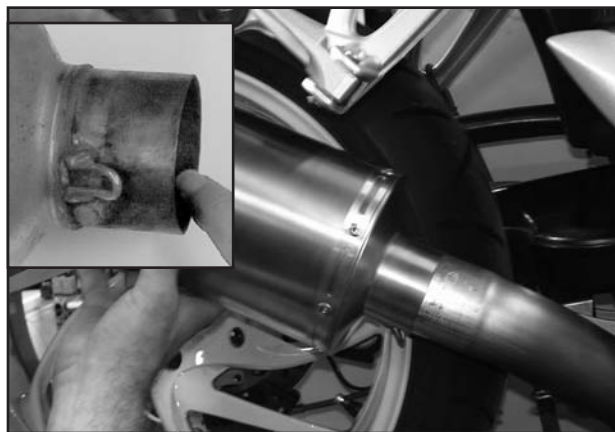


Figure 7



Figure 6

USE FASTENERS FROM PARTS BAG TO INSTALL HANGER BRACKET

15. To the outside of exhaust mount, install the Hanger Bracket Rubber Assembly using the Screw and one Washer.

To the inside of Exhaust Mount install the second Washer and loosely secure with Nut. **Figure 8.**

16. Install the Spring. (**Spring Puller**) **Figure 9.**

18. Tighten the hardware in the following order:

Clamp Holding Silencer Joint

Hanger Bracket (**13mm Wrench and 6mm Hex Key**) **Figure 10.**



Figure 9

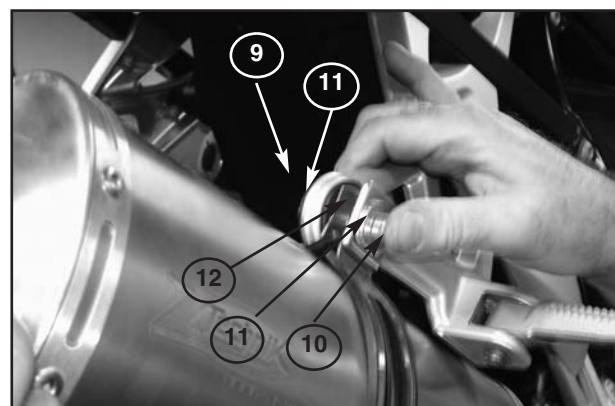


Figure 8



Figure 10



WARNING If the addition of an accessory(ies) adversely affects your motorcycle's stability immediately remove the accessory(ies). Do Not ride a motorcycle that exhibits unsafe handling traits. Have experienced service personnel correct any problem before riding with the accessory(ies) installed. For further questions concerning handling problems associated with an accessory(ies), contact your dealer, motorcycle manufacturer, or accessory manufacturer.



MAINTENANCE Repack the mufflers at 6000 mile (10,000 km) intervals. The muffler repack kit is Z-Technik #Z4031-001. Discoloration can be removed from the Exhaust System with a quality metal polish. Be sure to remove all polishing compound residue from the Exhaust System before running the engine. Refer to the WARRANTY PAMPHLET 10-11841-000 for complete Repack and Maintenance Instructions.